

Voice Command



Your Juno System lets you remotely control parameters of your Juno Tower using a few simple voice commands.

To issue a voice command:

1. Press and hold the One-Touch button on the Pendant Microphone.
2. Wait for Voice Command tone and Tower LCD background to turn green.
3. Keeping the button pressed, issue one of the commands below.
4. Wait for confirmation tone and Tower LCD background to return to white.
5. Release the button.

For best performance:

- Follow the sequence above precisely when issuing voice command.
- Avoid brushing the microphone against clothing, jewelry, etc. while issuing voice command.
- Speak clearly with a normal conversational tone.
- When issuing the Finish command, wait until the LCD background returns to white before releasing the button.
- Avoid holding the microphone close to the mouth with speaking a command. The microphone is optimized to understand commands when it is sitting flat on the chest.

Say:	When you want to:
Increase	Increase the volume by 2 steps
Reduce	Reduce the volume by 2 steps
LCD	Toggle Juno Tower LCD lock on/off
Begin	Begin or resume a suspended recording through the optional Juno lecture capture application
Suspend	Suspend a recording through the optional Juno lecture capture application
Finish	Stop, encode and automatically name a recording based on your personalized settings using the optional Juno lecture capture application

NOTE: Voice command works only with the Pendant (teacher) Microphone, and only on either channel A or B.

NOTE: While recording, voice command tone and confirmation tones are not heard so they will not be recorded.

NOTE: In some cases, if the Tower does not recognize a command, the LCD will remain green for up to 20 seconds. During this time, audio will not transmit from the microphones.